


Serial cable
(DB-9)

GPS cable
(RJ-45)

Board reset button

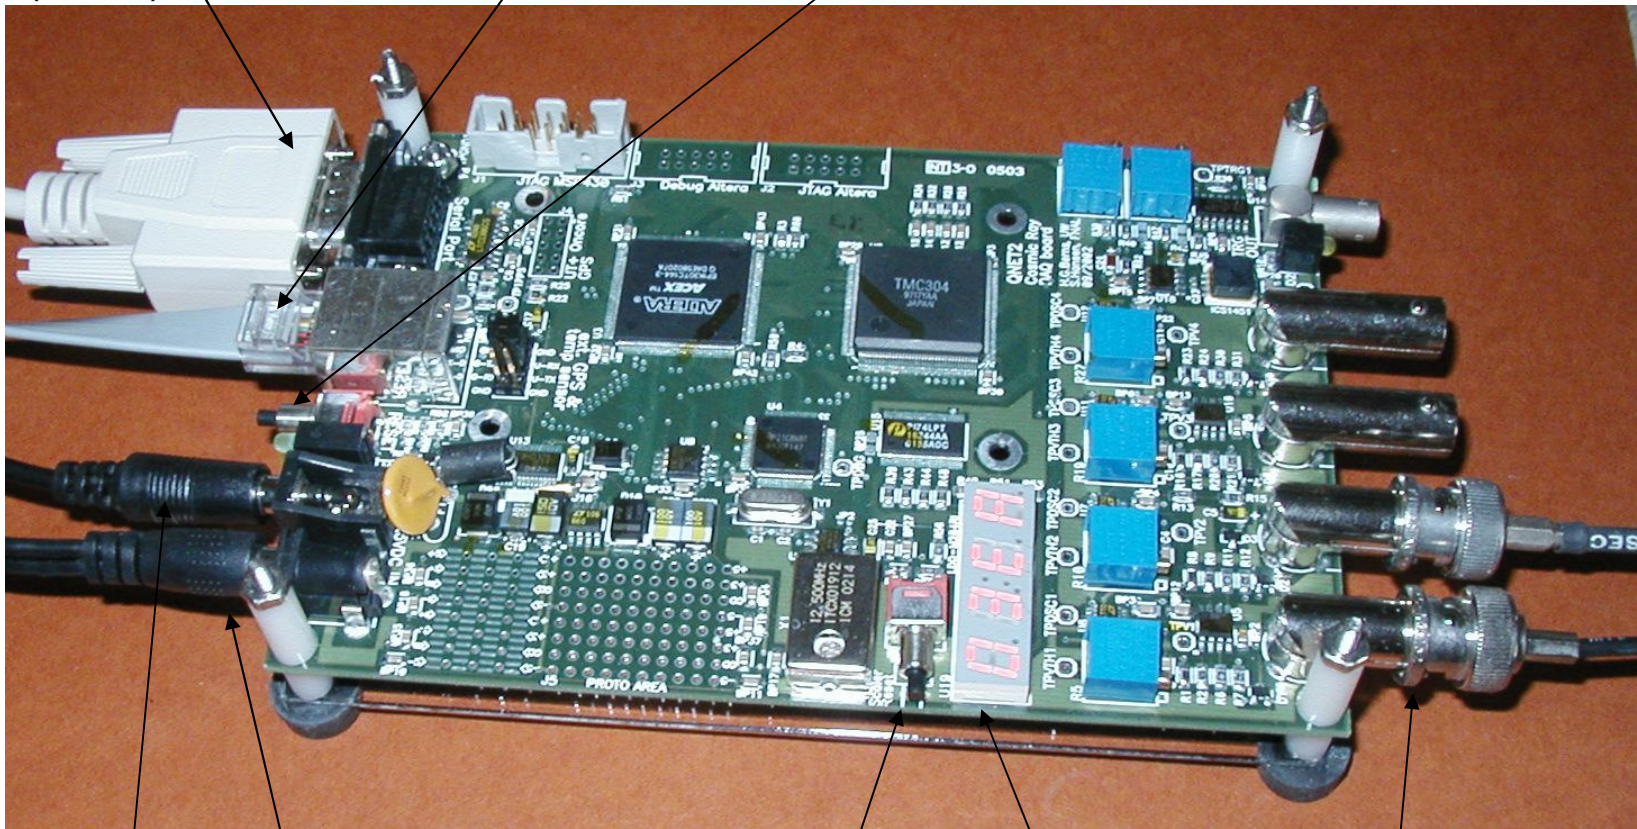

External power

Hex scaler

Detector inputs
(BNC)

Power to first PMT
(mini-phone plug)

Scaler reset button

Logic Board Connections